AC-Midsize umbrella FARE®-Sound 7799



Safety and operation

Operating manual

ΕN Original 1.2022 Issue

FARE - Guenther Fassbender GmbH Stursberg II 12 D-42899 Remscheid

+49 (0) 2191 60915-0 Fax +49 (0) 2191 60915-20

Web fare.de E-mail info@fare.de

Safety

Please read the safety advice and these instructions before using the umbrella.

In this way, you will avoid injury or damage to yourself or other

persons.

Unpacking =

Packaging material is not a toy

Dispose of plastic bags and other packaging material properly immediately after unpacking.

Children, persons with disabilities or animals cannot assess the risks posed by packaging material and may be injured or killed while playing.

Keep the instructions in a safe place

These instructions belong to the umbrella. Keep this manual for future reference, so that you or other persons can access the information on safety and operation.

Missing information can lead to accidents.

Proper use

The umbrella is designed to guard against precipitation. Any other use, even in extreme weather situations, is not permitted. Use for other purposes may result in injuries.

Opening 4

Check for damage

Check the umbrella for damage before opening. If you notice any damage, do not open the umbrella.

A damaged umbrella can injure you when opening it.

Only proficient persons

Only allow proficient persons to open or close the umbrella.

Inexperienced persons, persons with disabilities, or small children can injure themselves or other persons when opening or closing.

Music or sounds when opening

When opening or pressing the ON/OFF button, the handle of the umbrella plays sounds or music.

You, other people or animals may be disturbed or their perception of the environment may be impaired.

Pay attention to your surroundings

Pay attention to your surroundings when opening. When the umbrella opens automatically, you need free space around you. You, other persons or animals may be injured when the device is opened out.

Closing =

Secure the umbrella with the closing strap

Secure the umbrella with the closing strap after closing. This prevents accidental opening of the umbrella.

An umbrella opening unexpectedly can cause injuries.

Storage =

Choose a safe place

Choose a safe place for storage that is not accessible to persons with disabilities or children.

Playing with the umbrella can cause injury to persons.

Disposel •


Do not dismantle the umbrella

Do not dismantle the umbrella before disposal.

You may be injured on sharp edges or pointed parts.

In advance

Get to know your new umbrella here.

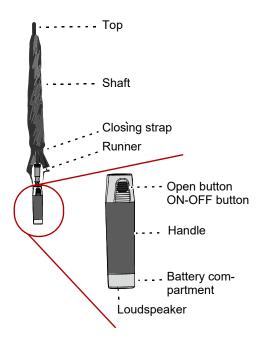


Unpacking

After unpacking, please dispose of the packing material properly. Observe the regulations for disposal for your local



 ▶ Remove the plastic bag



- ▶ Slightly loosen the cap onto the handle and remove the protective strip
- ▶ Screw the cap onto the handle again









You can open the umbrella at the push of a button.



▶ Open the closing strap



▶ Point the umbrella away from you and press the open button. The umbrella opens and a sound or music plays.




You can close the umbrella mechanically.




- ▶ Hold the umbrella by the handle with one hand and pull the runner down with the other hand
- ▶ Secure the umbrella with the closing strap

Batteries


Change drained batteries. Remove the batteries from the handle if you do not use the umbrella for a long time.

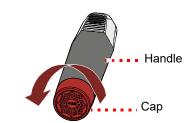

▶ Unscrew the cap on the handle

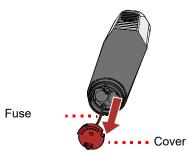

- ▶ Remove the cover and release. The cover is held by a safety catch.
- ▶ Remove drained batteries

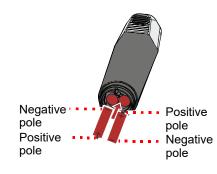

- Insert 2 micro-batteries (AAA) 1.5 V. Pay attention to the positive pole and negative pole
- ▶ Reinsert the cover
- Screw the cap onto the handle again

Storage

You should keep the umbrella dry and in a safe place.

Tips

- · Leave a wet umbrella open to dry.
- For safely storing close the dry umbrella and secure it with closing strap.



Care

The umbrella requires little care.

Tips

- You can use a damp cloth for the cover.
 Do not use any cleaning product, otherwise the cover will become permeable to water.
- A dry, soft cloth is suitable for the shaft and handle.

Technical specifications

The umbrella is equipped with a loudspeaker through which sounds or music can be played.

Balleries	ZX MICTO AAA 1.5 V
Protection class	IP X4
	Chemical system: Zinc-
	Manganese dioxide
	(ZN/MnO ₂)



Disposel

When the umbrella has served its time, you can dispose of it like a small electrical appliance. Find out about the regulations applicable to your

local area at the time of disposal.



Do not dispose of batteries and umbrella in the household waste.

Tips

- Completely discharged batteries can be disposed of either via retailers or municipal collection points.
- You can put the umbrella into the collection for electrical and electronic equipment.

CE mark

For your safety, we have produced the umbrella according to the relevant EU guidelines. The umbrella displays the CE mark.

AC-Midsize umbrella FARE®-Sound 7799



- RoHS directive 2011/65/EU
- EMC directive 2014/30/EU

Assorted samples of harmonized standards:

- EN 55032:2015
- EN 55035:2017
- EN 62321:2009



